


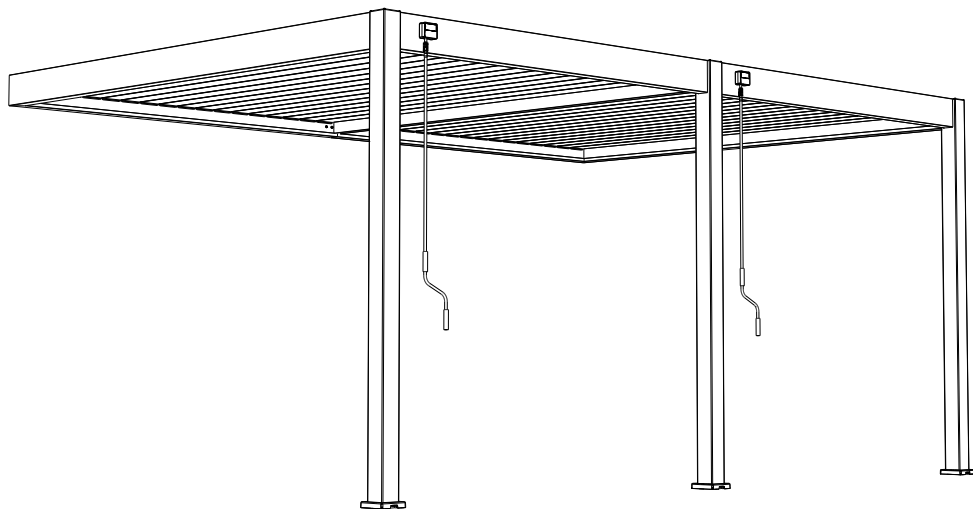














































Installation Guide for Pergola 3.6m x 5.3m



Carton	RET	QTY		REF	QTY		REF	QTY
1/6	AO	2		AO-1	1		IO	3
	JO	3		TO	12		XO-1	12
2/6	BO	2		BO-3	1		BO-4	1
	CO-1	1		CO-2	1		EO	1
	FO	2		HO	2		NO	2
	LO-2	2		LO-3	1		OO	2
	PO	2		QO	12		QO-1	2
	RO	12		SO	68		TO-1	12
	UO	100		UO-1	34		VO	102
	WO-1	18		XO	66		XO-2	68
	YO	6		ZO-1	1		ZO-2	1
	ZO-3	1		ZO-4	1		ZO-5	1
	ZO-6	1		ZO-7	1		ZO-8	1
3/6	GO	7		KO	2		LO	32
	LO-1	34		MO	66		WO	276
4/6	GO	9						
5/6	GO	9						
6/6	GO	9						

REF	PICTURE	QTY
A0		2PCS
A0-1		1PCS
B0		2PCS
B0-3		1PCS
B0-4		1PCS
C0-1		1PCS
C0-2		1PCS
E0		1PCS
F0		2PCS
G0		34PCS
H0		2PCS



REF	PICTURE	QYT
IO		3PCS
JO		3PCS
KO		2PCS
LO		32PCS
LO-1		34PCS
LO-2		2PCS
LO-3		1PCS
MO		66PCS
NO		2PCS
OO		2PCS
PO		2PCS
QO		12PCS
QO-1		2PCS
RO		12PCS
SO		68PCS
TO	 10×80	12PCS
TO-1	 8×100	12PCS








REF	PICTURE	QYT
UO	 lock nut	100PCS
UO-1	 plastic nut	34PCS
VO		102PCS
WO	 4×16	276PCS
WO-1	 5×19	18PCS
XO	 6×40	66PCS
XO-1	 6×35	12PCS
XO-2	 6×20	34PCS
YO	 6×45	6PCS
ZO-1	 4mm	1PCS
ZO-2	 4mm	1PCS
ZO-3	 6mm	1PCS
ZO-4	 6mm	1PCS
ZO-5	 10mm	1PCS
ZO-6	 T20	1PCS
ZO-7		1PCS
ZO-8		1PCS



ATTENTION!!!



Please open the louvers to vertical in winter and snowing weather to protect your pergola!




Tools Required for Installation


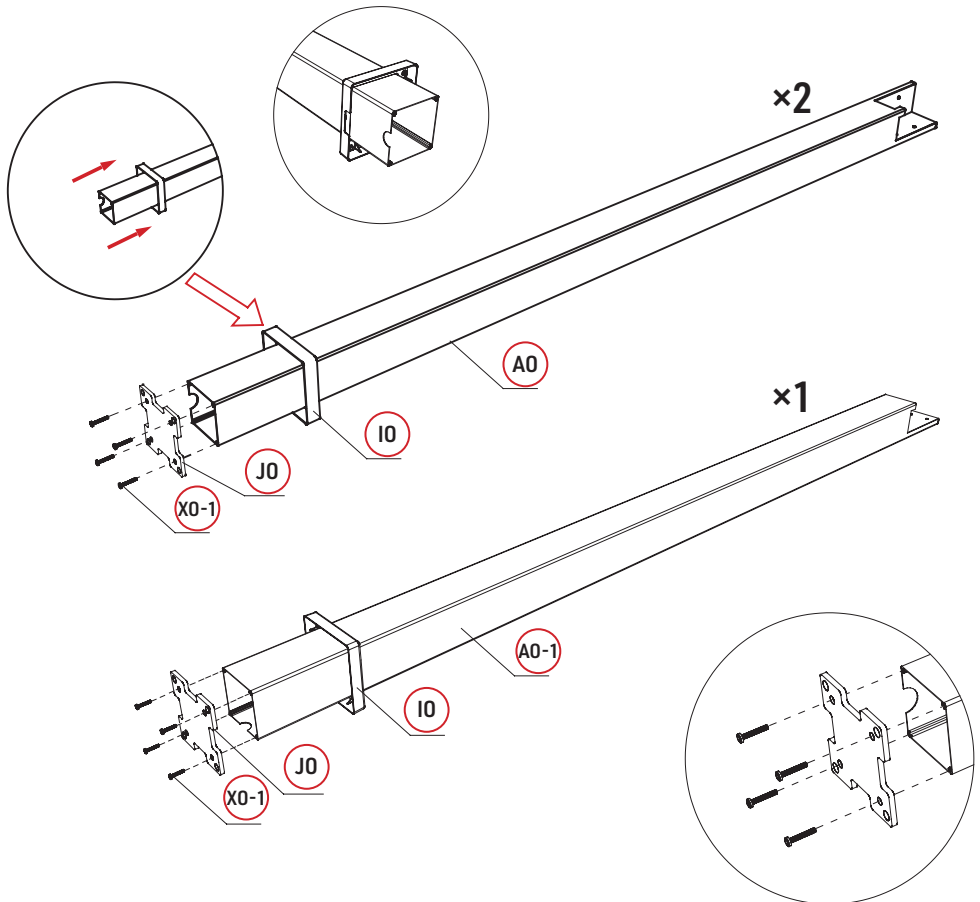



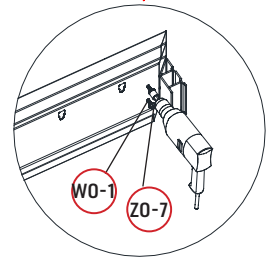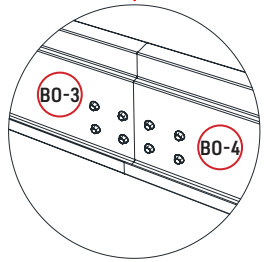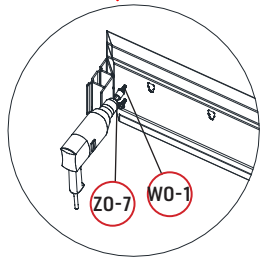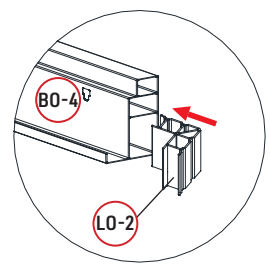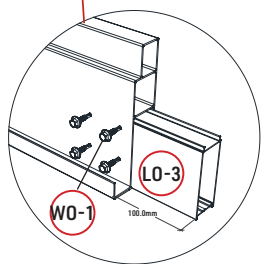
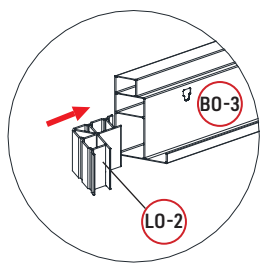
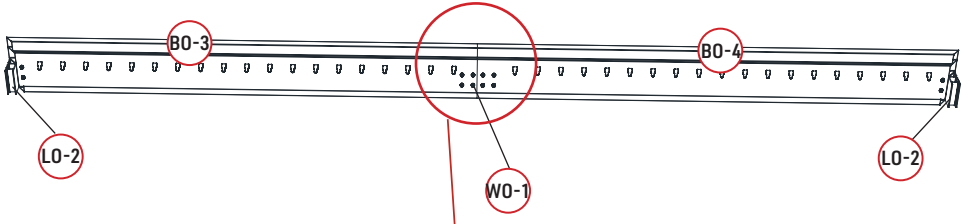




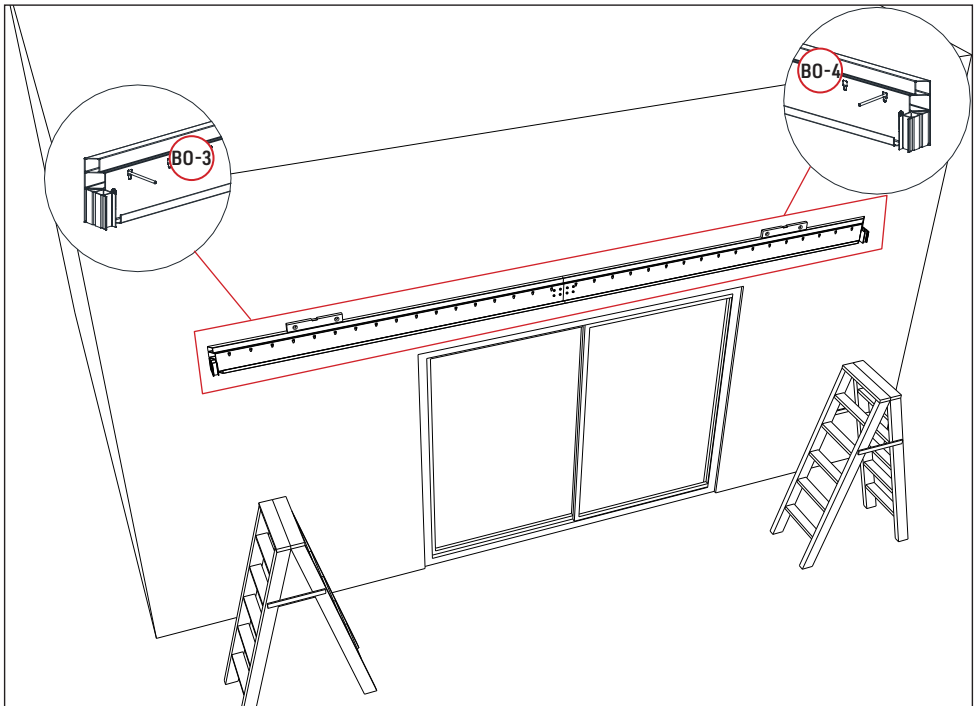
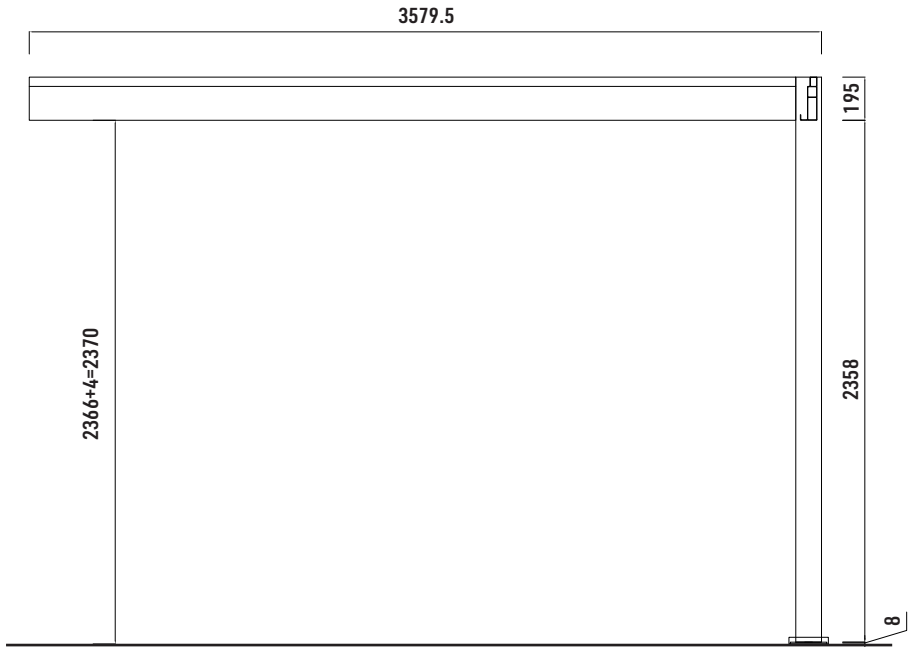




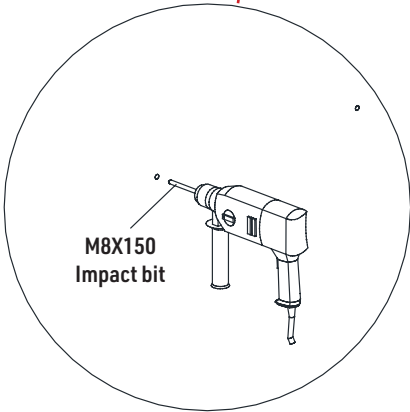
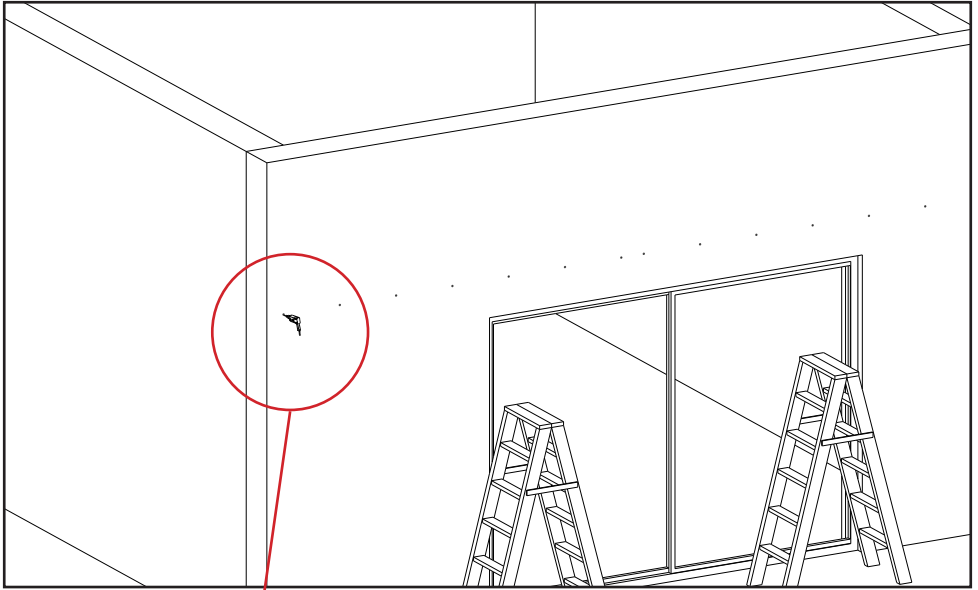




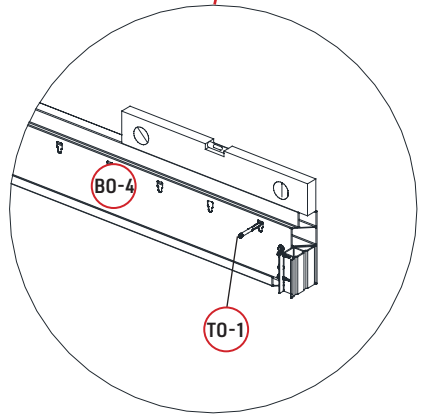
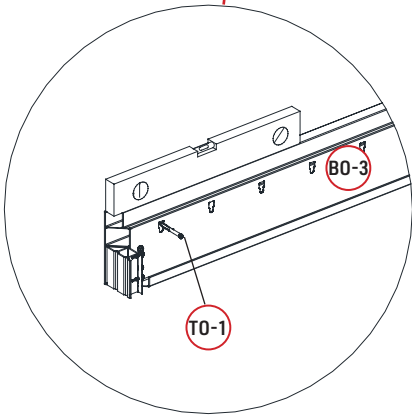
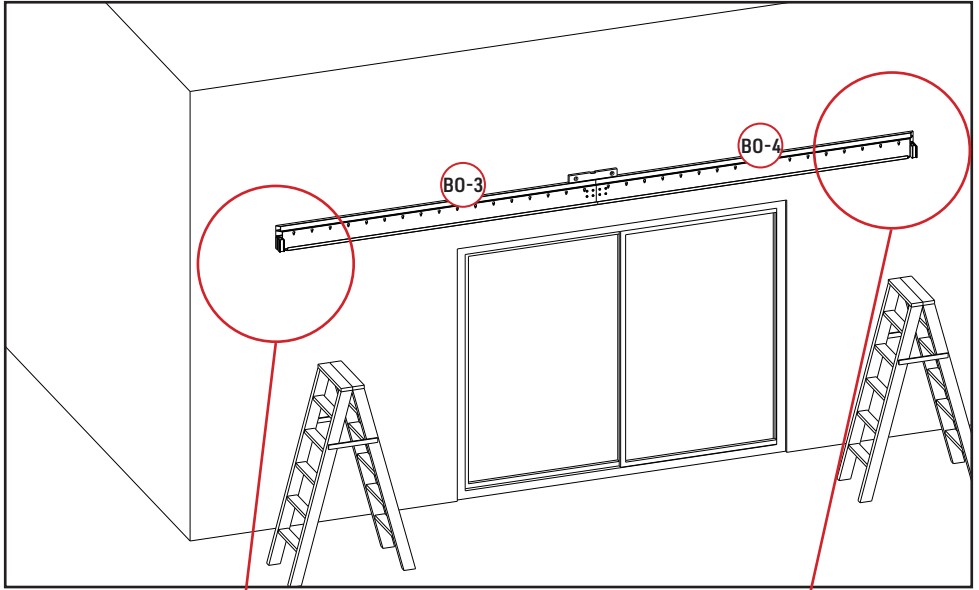


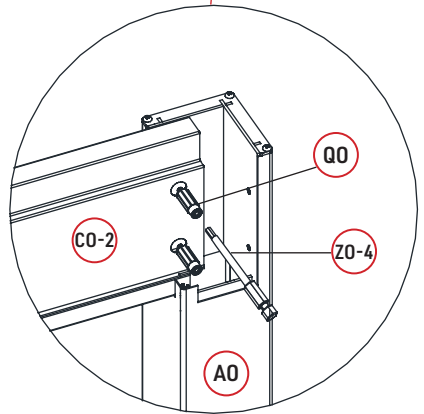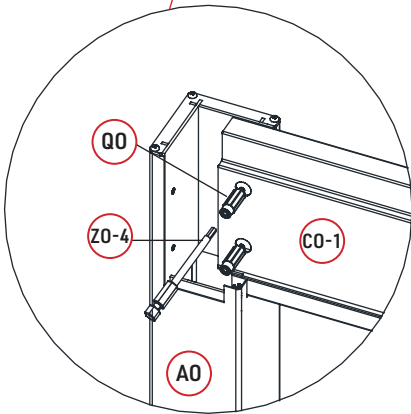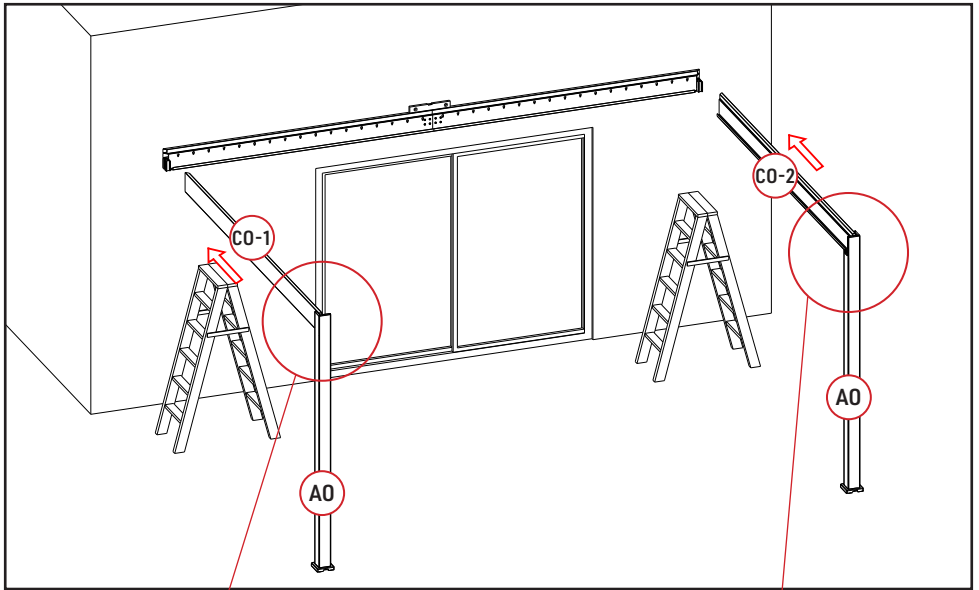

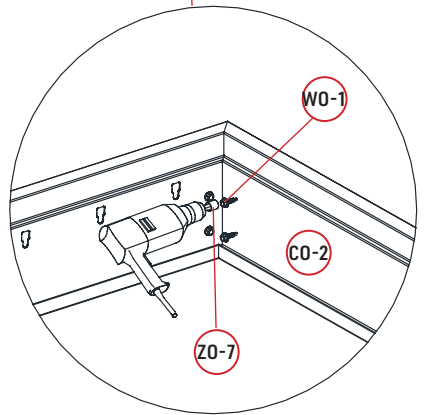
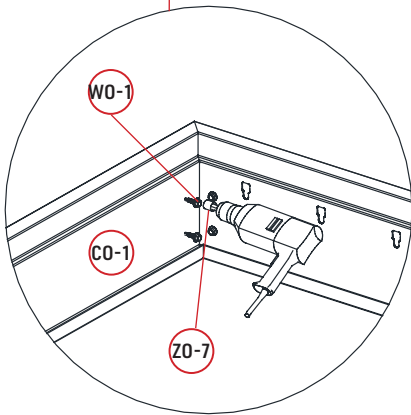
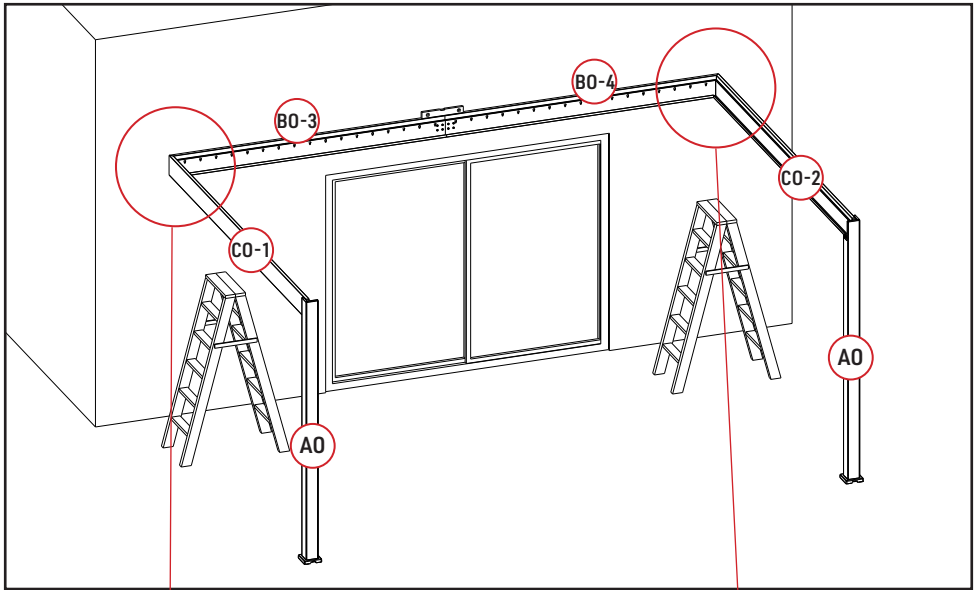


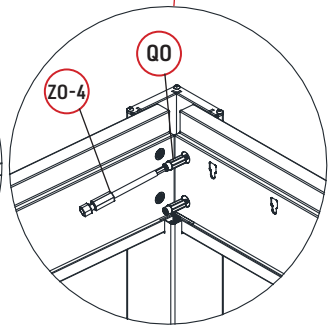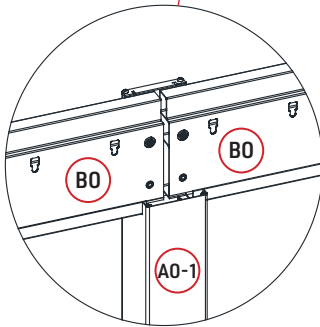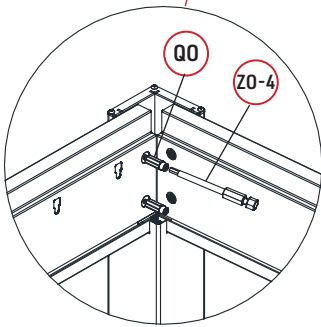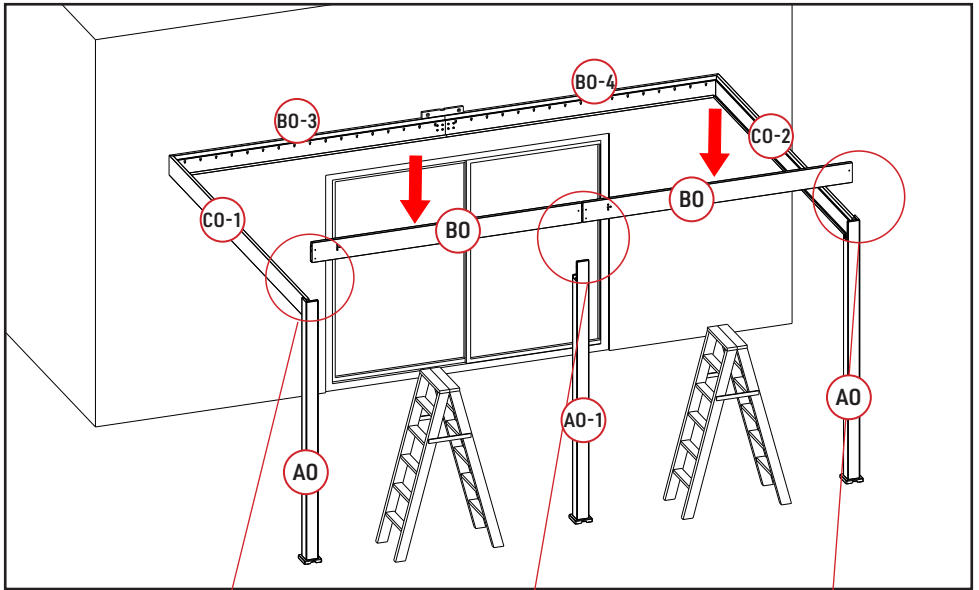

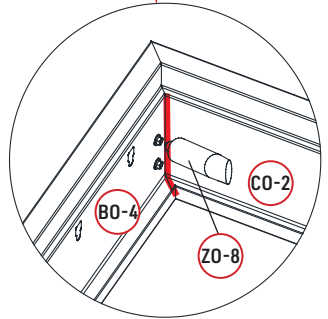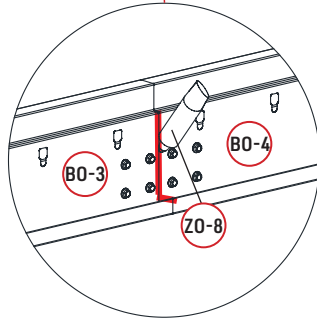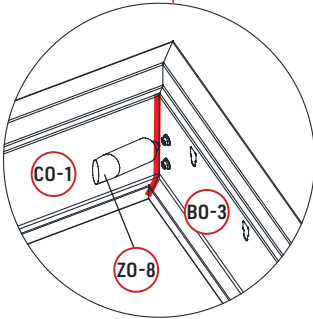
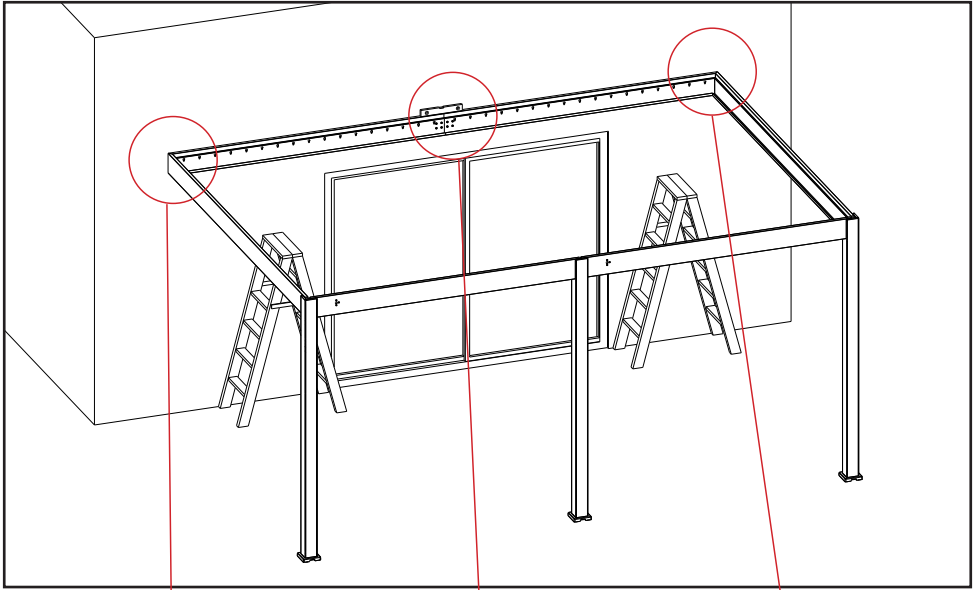


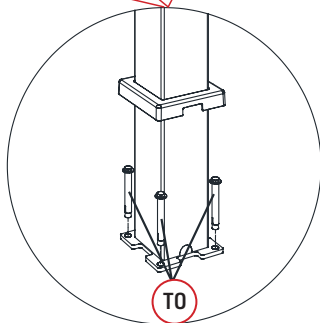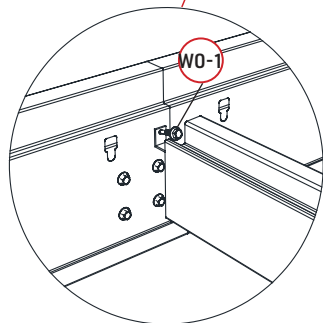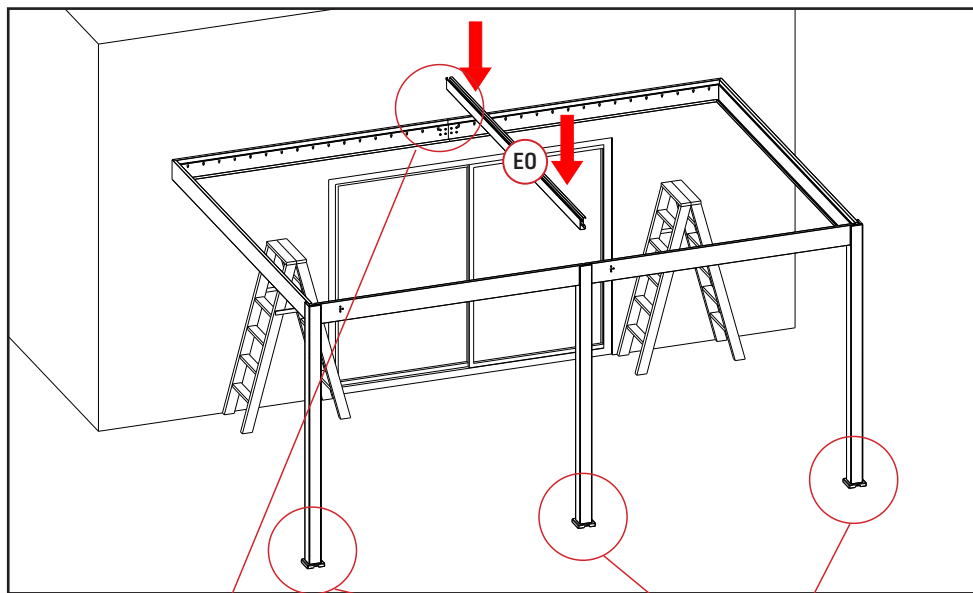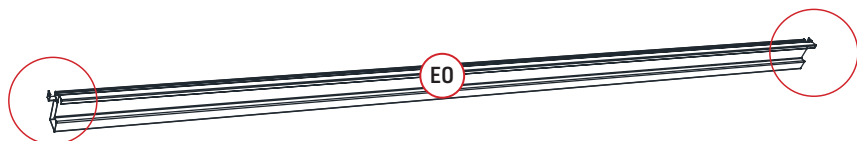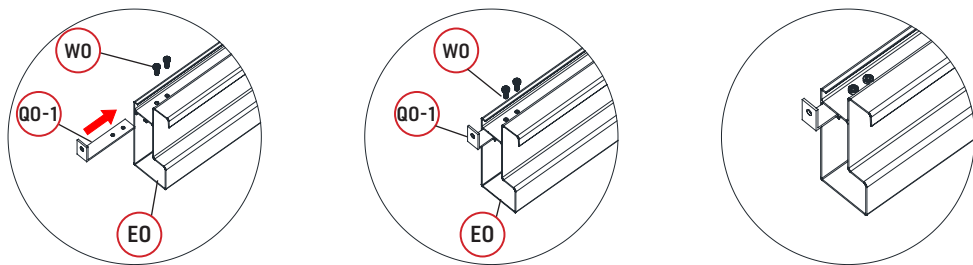

 **K0** ×2

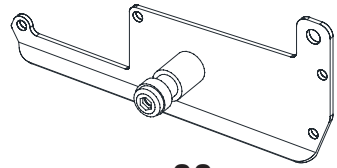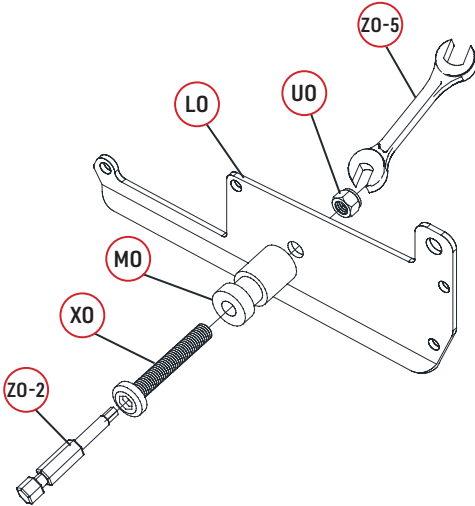
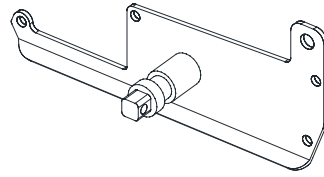


×32

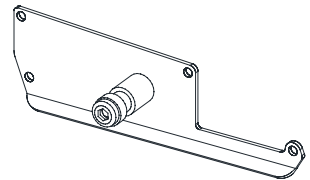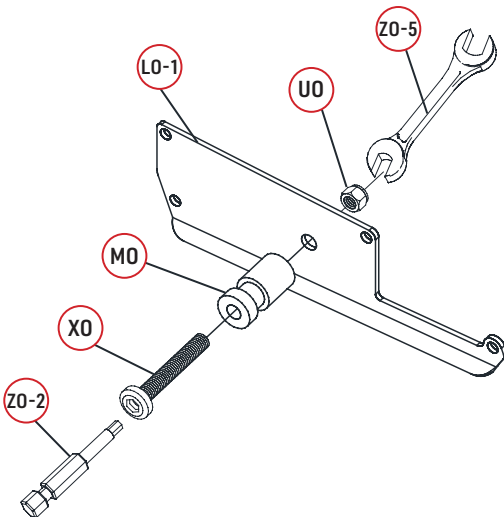

×34

×2

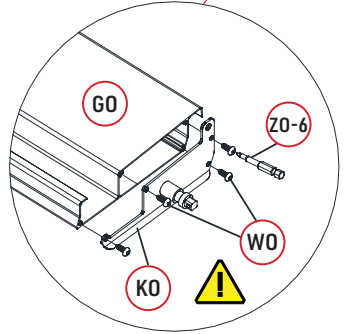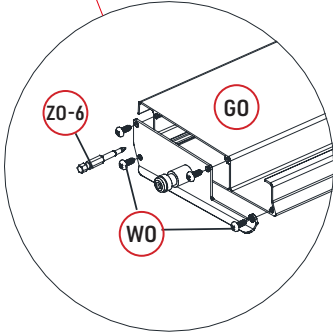

×34

